

BRITEC

ENGLISH

ONLY CONSUMES 35 W

AIR COOLER

AIR FRESH 10

INSTRUCTIONS GUIDE

- 800 m³/h
- ION
- 35W
- ...



www.britec.com

Thank you for choosing this product, please read this instruction manual before using it.

CONTENTS

SAFETY.....	24
BOX CONTENT	28
PRODUCT DESCRIPTION	29
INSTALLATION INSTRUCTION.....	30
CONTROL PANEL OPERATION	32
REMOTE CONTROL	34
COOL PACKS	35
MAINTENANCE AND CLEANING.....	36
TROUBLESHOOTING	39

SAFETY INSTRUCTION

PLEASE READ THE OPERATING MANUAL CAREFULLY BEFORE BEGINNING INSTALLATION, MONITORING, OPERATING, OR MAINTENANCE. PROTECT YOURSELF AND OTHERS BY FOLLOWING THE SAFETY INSTRUCTIONS. FAILURE TO COMPLY WITH INSTRUCTIONS MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND/OR LOSS OF WARRANTY CLAIMS!

IMPORTANT INFORMATION ABOUT SAFETY, SITE LOCATION AND ELECTRICAL CONNECTIONS.



Use this appliance exclusively under the guidelines of this operating manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or personal injury.

1. This appliance is **intended exclusively for the cooling of living spaces in households** and may not be used for any other purpose.
2. The appliance is **not suitable for continuous and precision operation** and should not be used for cooling electrical systems (e.g. in server rooms).
3. Remove the packing and make sure that the appliance is not damaged. In case of doubt, do not use the appliance, and contact the service centre or your dealer.
4. If the appliance has a defect, switch it off and contact either your dealer or the customer hotline
5. If the power supply cable is damaged, it must be replaced by the manufacturer or an authorised service centre to avoid all possible risks.
6. For any repairs, always contact the customer service offices authorised by the manufacturer.

7. Before connecting it to the mains power supply, **check that the mains voltage and the type of electrical current matches the information provided on the type plate on the appliance.**
8. The electrical outlet that the appliance must be connected to, must not be defective or loose and must be suitable for the current load required, and, above all, must be reliably earthed. In case of doubt, have your electrical installation checked by a qualified electrician.
9. **Avoid using an extension cable**, because this could overheat and cause a fire.
10. It is forbidden to adapt or modify the characteristics of this appliance in any way. Use only replacement parts and accessories recommended by the manufacturer (failure to comply will result in the loss of the guarantee and warranty).
11. **Children must not be allowed to play with the appliance.**
12. Do not let small children play with the packaging – **THERE IS A DANGER OF SUFFOCATION ON SMALL PARTS!**
13. Children under 8 years of age and persons with limited physical, psychological, sensory or mental abilities, as well as a lack of experience and knowledge, may only use this appliance under appropriate supervision and if this appliance is used for detailed instructions on both using this appliance in a safe manner and describing any existing hazards.
14. **Do not operate the appliance unattended.** Whenever you leave the room, **always switch off the appliance.**
15. Do not twist, buckle or snap off the power supply cable.
16. **Do not use the appliance with wet hands.**
17. **Do not use the appliance outdoors.**
18. **Never cover the appliance.**
19. **Do not operate the appliance in rooms where gas, oil or sulphur are present.**
20. **Do not use the appliance near water or high humidity, e.g. in damp cellars, or next to swimming pools, bathtubs or showers. Make sure that water does not get into the appliance.**

21. **Do not place the appliance near heat sources (e.g. next to heating systems) and avoid direct sunlight.**
22. **Keep a minimum distance of at least 50 cm from combustible substances (e.g. alcohol) or pressurised vessels (e.g. spray containers).**
23. **Do not place any heavy or hot objects on top of the appliance.**
24. Place the appliance **on a solid and even support surface.**
25. **Never insert** fingers, pins or other objects into the appliance and make sure that the **air entry and outlet are never blocked.**
26. **Change the water regularly.**
27. Always fill the water tank above the minimum level, but never above the maximum level.
28. If there is water in the water tank, do not move the appliance quickly to avoid any leakage(s) or splashing any water.
29. To avoid high humidity, do not use the appliance in “COOL” mode for long periods of time in a closed area without ventilation.
30. The cool packs are not a toy – keep children and animals away from them.
31. Never attempt to open the cool packs for any reason. The liquid contained in it can be harmful to health.
32. Remove the plug and empty the water tank, when the appliance is not in use.
33. **Always** switch the appliance off, **before unplugging it.**
34. Do not pull the mains cable to disconnect the appliance from the mains supply. Always pull the plug to pull out the mains cable.
35. To avoid electric shocks, **do not handle the plug with wet or damp hands.**
36. When not in use, keep the appliance vertical in a safe, dry place that is inaccessible for children, and do not cover the appliance with plastic packaging.
37. Maintain the appliance in good condition by maintaining and cleaning it. If you have any questions about maintenance, contact the customer hotline/service center authorized by the manufacturer



RECYCLING

The packaging materials can be recycled. Therefore, it is recommended to dispose of them in sorted waste.



WASTE MANAGEMENT

The pictogram with the crossed-out dustbin points to the requirement for separate disposal of electrical and electronic appliances (WEEE). Electrical and electronic appliances can contain hazardous and environmentally hazardous materials. Therefore, do not dispose of these in the unsorted residual waste, but at a registered collection center for waste electrical and electronic equipment. By doing so, you will help to conserve resources and protect the environment. For further details, please consult your dealer or your local authorities.

TIPS FOR CORRECT APPLICATION

 
Here are some tips to get the very best out of the air cooler:

- Protect the room from direct sunlight with curtains, blinds or shutters. This saves you energy.
- Do not place any objects on to the appliance, and do not obscure the air outlet.
- Keep the air outlet and air inlet grilles clear.
- Make sure that no heat sources are operating in the room.
- Never use the appliance in very humid rooms (e.g. laundry rooms).
- Do not use the appliance outdoors.
- Make sure that the appliance is on level flooring and that the locking brakes are applied.

BOX CONTENTS

- 1x air cooler
- 2x cool packs
- 1x remote control
- 1x operating manual

PRODUCT DESCRIPTION

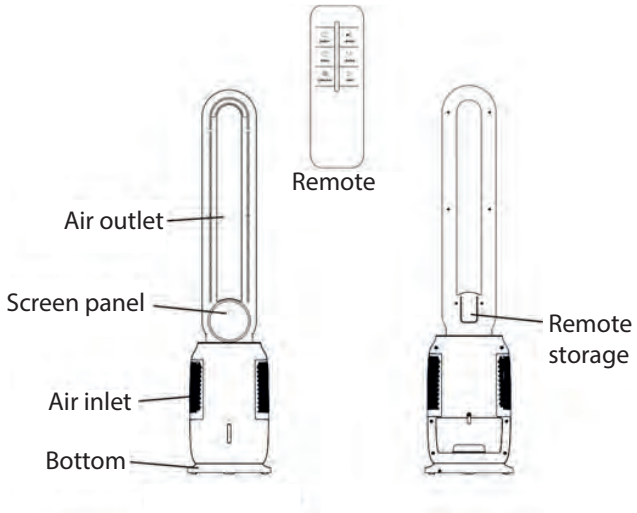

INSTALLATION

Unpacking the Appliance

- Open the carton and take out the appliance.
- Remove all packaging from the appliance.
- Unwind the mains cable completely and make sure not to damage it.

Installation

Please note the following points for installation.

- Place the appliance on a level and solid surface and adjust the locking brakes so that the appliance stands firmly in position.
- There must be at least a 50 cm gap to walls or other objects.
- Before using the appliance, make sure that both the air inlet and the air outlet are free of obstacles and are not blocked.
- Connect the appliance to an earthed outlet.



Filling the water tank

1. Please check first on the back of the appliance whether the rubber plug is firmly inserted in the water outlet and closes it so that the water tank cannot accidentally leak out.
2. Fill the water tank on the top of the appliance. Open the cover on the top of the unit and pour in clean water, checking the level on the front of the water tank:

MIN-mark:

 
The water tank must be filled to above the MIN mark so that the pump can function properly

MAX-mark:

The water tank must not be filled over the MAX mark, otherwise water could enter the inside of the appliance and thus damage electronic parts.

3. Make sure the water tank is not damp or wet on the outside, and if so, wipe it dry.
4. Close the cover again.

CONTROL PANEL OPERATION

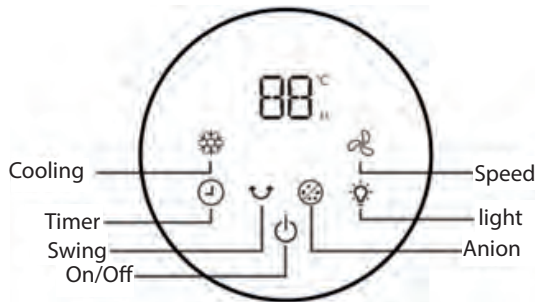

1. ON/OFF-Button :

Press the -button to switch the appliance on and off.

2. SPEED-Button:

The display will appear as follows:

01- 12, 12 different speed

When the display stops flashing, the setting is accepted.

3. TIMER-Button:

Use the TIMER-Button to switch off the appliance in a time-controlled operation. Each time you press the timer key, the operating time is extended step by step by one hour from 1 hour to 12 hours.

To switch off the appliance automatically, please proceed as follows: While the air cooler is in operation, press the TIMER button repeatedly until the desired hour duration lights up. The setting is accepted when the desired hour duration stops flashing.

4. COOLING-Button:

Use the COOLING button to start the function.

Make sure that the water level indicator is above the MIN level.

As soon as the button is pressed, the appliance starts pumping water against the water filter to create cold and moist air, that is then blown out of the appliance.

5. OSZILLATION:

- Use the SWING button to activate the oscillation of the appliance. The display on the control panel lights up.
- Press the SWING button again to deactivate the function.
- NOTE: This function allows the blown-out air to be distributed to the left and right. This enables horizontal air distribution in the room.

6. ANION:

- Use the anion button to start the function.

7. Light:

- Use the light button to turn on the decoration light.

REMOTE CONTROL

Preparing remote control - Inserting or replacing batteries

Please follow the instructions below:

- To operate the remote control, please insert the AAA battery.
- Please always pay attention to the polarity markings (+/-) on the battery and the battery holder.
- Then push the battery holder back into the remote control completely.

Correctly use the remote control

Point the remote control directly at the front of the appliance, making sure that there are no obstacles between the remote control and the appliance.

NOTE: Please handle the remote control carefully.

Do not expose the remote control to direct sunlight and keep it away from heat sources.

COOL PACKS

 
You will receive two cool packs in the package, which you can place on the top of the appliance to achieve a further cooling effect.

When using the cool packs, please note the following:

- Fill the cool packs with water up to the MAX-mark.
- Before use, place the cool packs in a freezer for at least 3-4 hours.
- Fill the Air Cooler with water. please make sure that the MAX mark is not exceeded.
- Place the cool packs in the compartment on the top of the appliance.



MAINTENANCE AND CLEANING

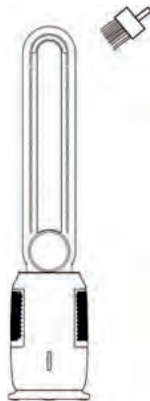

Cleaning cover grille

To ensure that the air cooler operates efficiently, you should clean the cover grille after each week of operation.

1. Before cleaning the appliance, switch it off, then wait a few minutes, and then unplug it to disconnect the appliance from the mains power supply.
2. Use a screwdriver to remove the 2 locking screws on the cover grille and remove the cover grille from the device.
3. Use a vacuum cleaner to remove the dust accumulated in the cover grille.
4. If the cover grille is very dirty, immerse it in warm water and rinse it several times – but the water temperature must not exceed 40°C.
5. Before putting the cover grille back into the appliance, allow it to dry out well after washing.
6. Replace the cover grille and secure it with the locking screws.

Note: Never use the appliance without the cover grille.

Cleaning the housing

Before cleaning the appliance, switch it off, then wait a few minutes, and then unplug it to disconnect the appliance from the mains power supply.

Clean the appliance with a moderately damp cloth, then wipe it with a dry cloth.

- Never use benzene, alcohol or solvents to clean the appliance.
- Do not spray insecticides or similar agents on to the air cooler.

Emptying the water tank

It is recommended to empty and clean the water tank every 2-3 weeks during use. Please follow these steps:

- Remove the water tank from the appliance.
- Remove the water pump by removing it from the safety holder.
- Then remove the water tank completely from the appliance.
- Clean the tank both inside and outside with a soft cloth that has been previously immersed in soapy water.
- Then rinse the tank with warm and clean water.
- Allow the tank to dry completely and then put the water pump back into the plastic holder before inserting and filling the water tank.

ACTIVITIES AT THE BEGINNING/END OF THE SEASON

ACTIVITIES AT THE END OF THE SEASON

- Switch off the appliance and disconnect the mains plug.
- Carefully empty and clean the water tank.
- Clean the cover grille and reinsert it after drying (see section “Cleaning cover grille”).
- Pack away the appliance and store it in a cool, dry place.

INSPECTIONS AT THE BEGINNING OF THE SEASON

- Verify that the power supply cable is in order and that the earthing is functioning.

Follow the installation and safety instructions carefully.

TROUBLE SHOOTING

Before contacting our customer hotline/service centre, please check whether the error can be rectified using the instructions below.

PROBLEM	POSSIBLE CAUSE	SOLUTION
The air cooler does not switch on	Power failure	Wait for the power supply to be restored
	The appliance is not connected to the power supply	Connect/plug the appliance to the power supply and wait for a minimum of 30 mins!!
The air cooler works only for a short amount of time	The water tank is empty	Fill the water tank
	Something is blocking the air outlet	Check and remove all obstacles that are blocking the air supply
During operation, an unpleasant odour is emerging from the room	The air filter or water tank is dirty	Clean the air filter(s) and/or water tank in accordance with the description
The appliance is very loud	The floor that the air cooler is located on is not level	Place the air cooler in a different location